


DURA-PUMP™ QUICK CADDY
DEF 4000 Series • Mounting Options




275/330
TOP MOUNT
TOP DRAW



275/330
TOP MOUNT
BOTTOM
DRAW

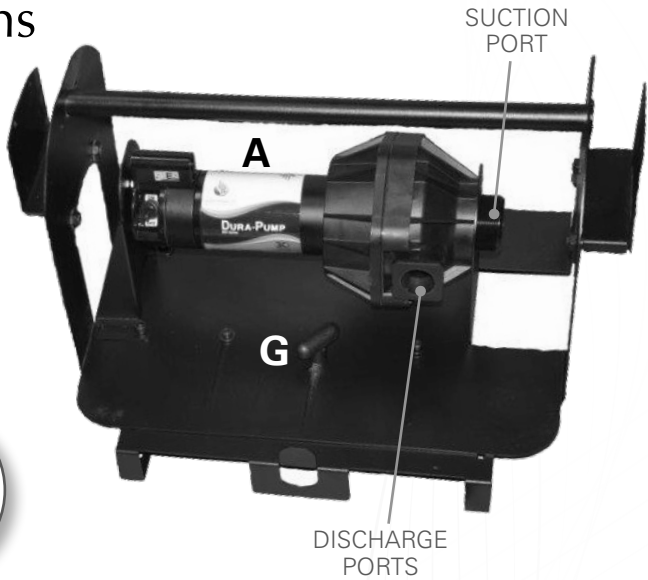

Discharge Hose Assembly

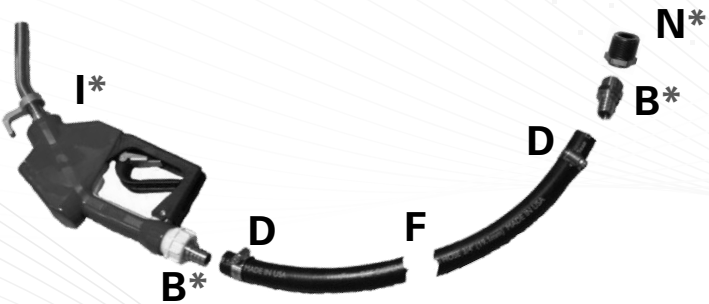

* Add thread sealant to the threads.

TOP Suction Hose Assembly



* Add thread sealant to the threads.

BOTTOM Suction Hose Assembly



* Add thread sealant to the threads.

CONTENTS

- | | |
|--|-------------------------------------|
| (1) A Dura-Pump™ | (1) H RSV/RPV Coupler |
| (2) B Swivel | (1) I Nozzle |
| (1) C 3/4" x 5' Suction Hose | (2) J 90° Hose Barb |
| (4) D 3/4" Hose Clamps | (1) K 18" Suction Hose |
| (1) E 2" Female Cam Lock | (1) L 2"x 1" Bushing |
| (1) F 3/4" x 20' Discharge Hose | (1) M 1" Hose Barb |
| (1) G Caddy | (1) N 1" x 3/4" Poly Reducer |

TOOLS REQUIRED

- 5/16 wrench or flathead screwdriver
- Pipe thread sealant
- WD-40 (optional)


IMPORTANT! Apply an even coat of thread sealant on **male threads**. Hand tighten joints and torque another 1/2 to 3/4 turn until threads are sealed.

DURA-PUMP™ ASSEMBLY GUIDE
DEF DISPENSING SYSTEMS

Congratulations on your recent Dura Products purchase.
This guide will show you the various ways to use your device.



TOP UNLOAD
FOUND ON PAGE 3

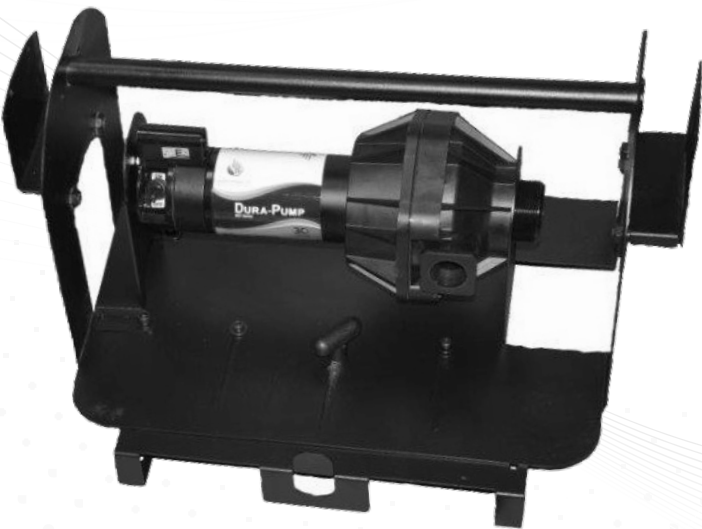

QUICK CADDY
FOUND ON PAGE 4




EASY CADDY
FOUND ON PAGE 2


CUSTOMER SERVICE

Need help? For assistance call
1-855-502-3872 Monday-Friday 8AM-5PM.

DURA-PUMP™ **EASY CADDY**
DEF 4000 Series • Mounting Options

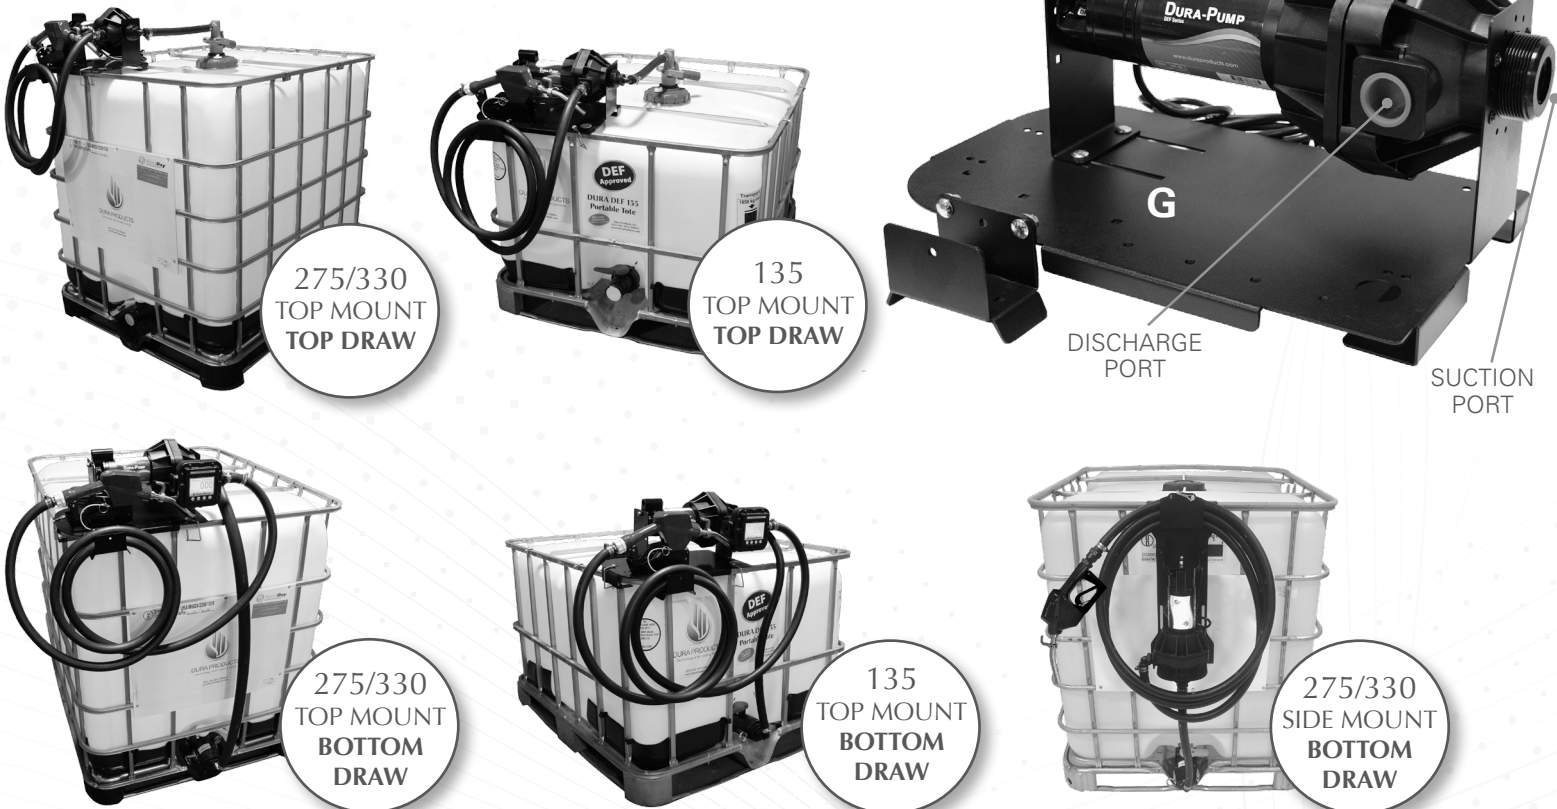

Discharge Hose Assembly

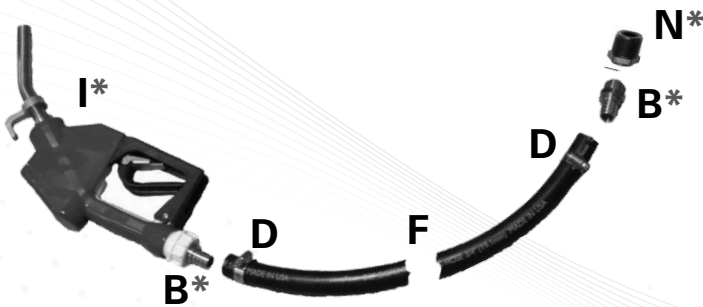


* Add thread sealant to the threads.

TOP Suction Hose Assembly



* Add thread sealant to the threads.

BOTTOM Suction Hose Assembly

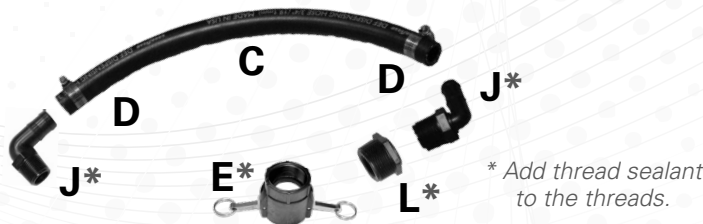

* Add thread sealant to the threads.

CONTENTS


- | | |
|--|------------------------------------|
| (1) A Dura-Pump™ | (1) H RSV/RPV Coupler |
| (2) B Swivel | (1) I Nozzle |
| (1) C 3/4" x 5' Suction Hose | (2) J 90° Hose Barb |
| (4) D 3/4" Hose Clamps | (1) K 18" Suction Hose |
| (1) E 2" Female Cam Lock | (1) L 2"x 1" Bushing |
| (1) F 3/4" x 20' Discharge Hose | (1) M 1" Hose Barb |
| (1) G Caddy | (1) N 1"x 3/4" Poly Reducer |

TOOLS REQUIRED


- 5/16 wrench or flathead screwdriver
- Pipe thread sealant
- WD-40 (optional)

IMPORTANT! Apply an even coat of thread sealant on **male threads**. Hand tighten joints and torque another 1/2 to 3/4 turn until threads are sealed.

DURA-PUMP™ **TOP UNLOAD**
DEF 4000 Series • Mounting Options

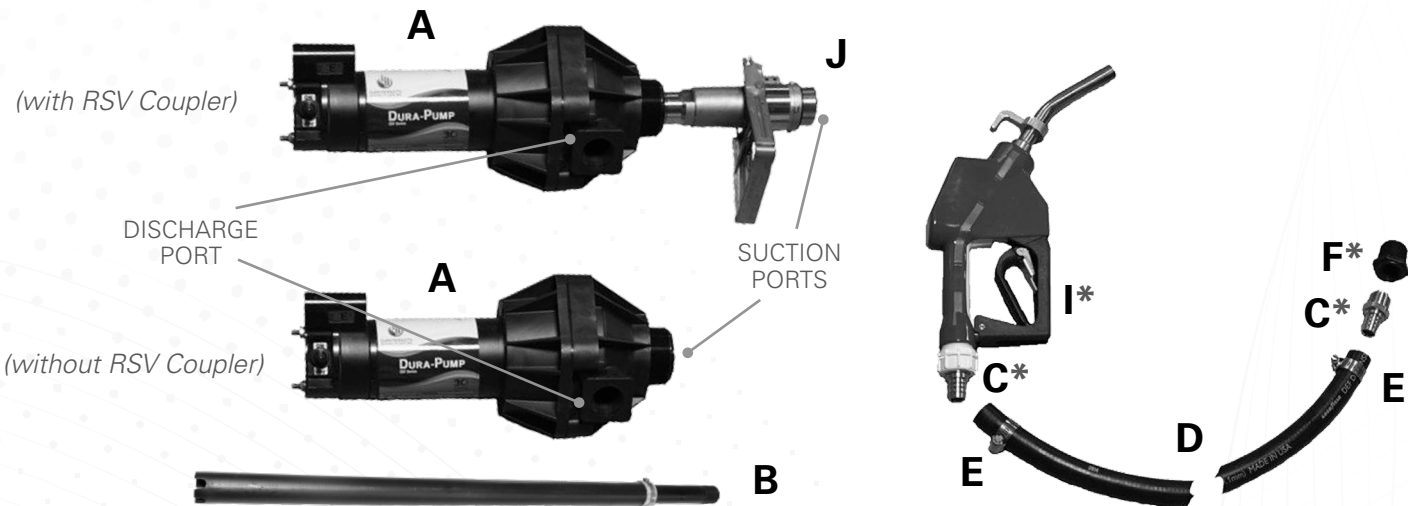

Dura-Meter™ Assembly & Mounting Options

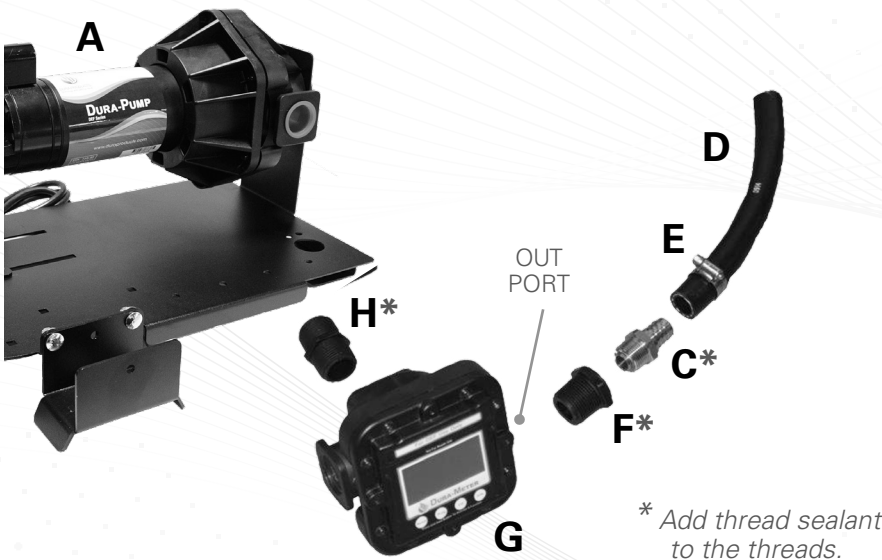

* Add thread sealant to the threads.

CONTENTS

- | | |
|--|-------------------------------------|
| (1) A Dura-Pump™ | (1) F 1" x 3/4" Poly Reducer |
| (2) B 1" Downtube | (1) G Dura-Meter™ (optional) |
| (1) C Swivel | (3) H 1" Nipple |
| (4) D 3/4" x 12" Discharge Hose | (1) I Nozzle |
| (1) E 3/4" Hose Clamps | (1) J RSV Coupler |

TOOLS REQUIRED

- 5/16 wrench or flathead screwdriver
- Pipe thread sealant
- WD-40 (optional)

IMPORTANT! Apply an even coat of thread sealant on **male threads**. Hand tighten joints and torque another 1/2 to 3/4 turn until threads are sealed.



TOP UNLOAD with meter



EASY CADDY with meter



QUICK CADDY with meter