

# DURA-PUMP™ ASSEMBLY GUIDE

## DEF DISPENSING SYSTEMS

Congratulations on your recent Dura Products purchase.  
*This guide will show you the various ways to use your device.*

### DEF DURA-PUMP™ EASY CADDY

Found on page 2



(without RSV coupler)



(with RSV coupler)

### DEF DURA-PUMP™ TOP UNLOAD

Found on page 3



**DURA PRODUCTS**  
Technology with Lasting Value  
[www.DuraProducts.com](http://www.DuraProducts.com)  
Arcadia, IN 46030 | (317) 984-4003

#### CUSTOMER SERVICE

*Need help? For assistance call  
(317) 984-4003 Monday-Friday 8am-4:30pm*



**DURA PRODUCTS**  
Technology with Lasting Value  
[www.DuraProducts.com](http://www.DuraProducts.com)  
Arcadia, IN 46030 | (317) 984-4003

# DEF DURA-PUMP™ EASY CADDY


DEFE 6000 SERIES / MOUNTING OPTIONS



275 / 330  
TOP MOUNT  
TOP DRAW



135  
TOP MOUNT  
TOP DRAW

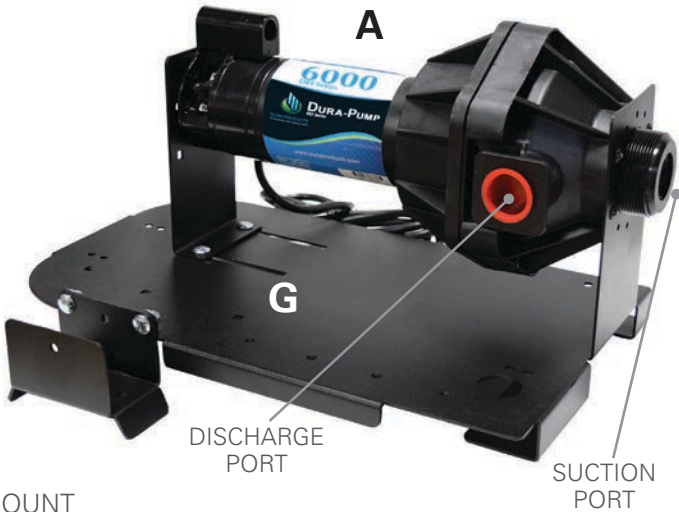

275 / 330  
TOP MOUNT  
BOTTOM  
DRAW



135  
TOP MOUNT  
BOTTOM DRAW

275 / 330  
SIDE MOUNT  
BOTTOM  
DRAW



CONTENTS (SYSTEM DEPENDENT)			
A	(1) Dura-Pump™	H	(1) RSV/RPV Coupler
B	(1) Swivel Hose Barb	I	(1) Nozzle
C	(1) 3/4" x 6ft, 1.8m Suction Hose	J	(2) 90° Hose Barb
D	(4) 3/4" Hose Clamps	K	(1) 18" Suction Hose
E	(1) 2" Female Camlock	L	(1) 2"x 1" Bushing
F	(1) 3/4"x 20ft, 6m Discharge Hose	M	(1) 1"x 3/4" Poly Reducer
G	(1) Caddy		



**IMPORTANT!** Apply an even coat of thread sealant on **male threads**. Hand tighten joints and torque another 1/2 to 3/4 turn until threads are sealed.

### TOOLS REQUIRED

- / 5/16 wrench or flathead screwdriver
- / Pipe thread sealant

# DEF DURA-PUMP™ TOP UNLOAD

DEFE 6000 SERIES / MOUNTING OPTIONS

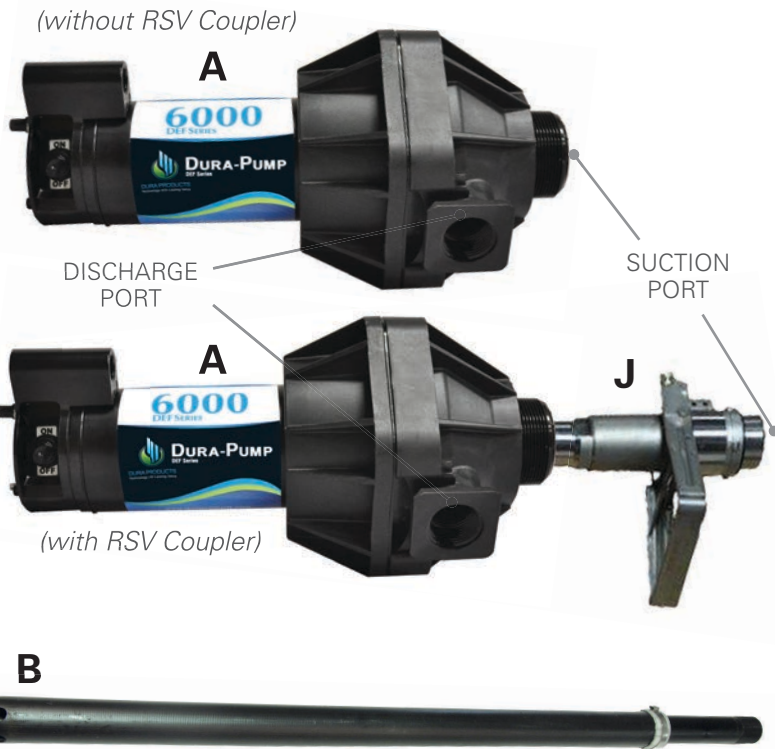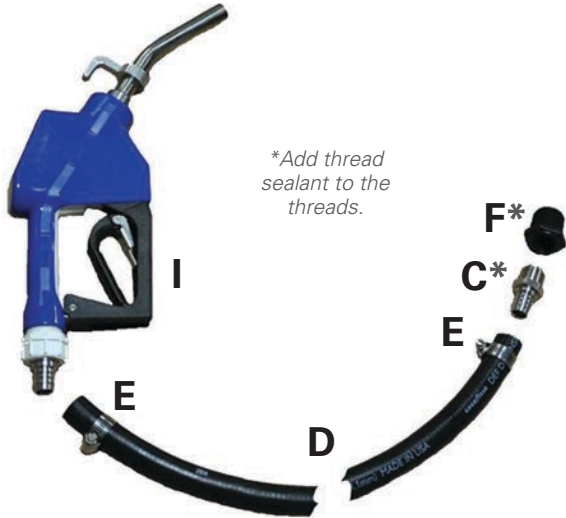

# DURA-METER™

ASSEMBLY & MOUNTING OPTIONS



CONTENTS (SYSTEM DEPENDENT)			
A	(1) Dura-Pump™	F	(1) 1" x 3/4" Poly Reducer
B	(1) 1" Downtube	G	(1) Dura-Meter™ (optional)
C	(1) Swivel Hose Barb	H	(1) 1" Nipple
D	(1) 3/4"x 20ft, 6m Discharge Hose	I	(1) Nozzle
E	(2) 3/4" Hose Clamps	J	(1) RSV Coupler

**IMPORTANT!** Apply an even coat of thread sealant on **male threads**. Hand tighten joints and torque another 1/2 to 3/4 turn until threads are sealed.

### TOOLS REQUIRED

- / 5/16 wrench or flathead screwdriver
- / Pipe thread sealant